



**Electrolux**



[electrolux.com/register](https://electrolux.com/register)



**EDH912R9WC**

**EN** User Manual | **Tumble Dryer**



## Important Information that may impact your Manufacturer's Warranty

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Electrolux manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Electrolux manufacturer's warranty in the event that your product fault is due to failure to adhere to this manual.

## WELCOME TO ELECTROLUX! THANK YOU FOR CHOOSING OUR APPLIANCE.



Get usage advice, brochures, troubleshooting, service and repair information at [www.electrolux.com](http://www.electrolux.com)



Register your product for better service: [www.registerelectrolux.com](http://www.registerelectrolux.com)

Subject to change without notice.

## CONTENTS

1. SAFETY INFORMATION.....	3
2. CONDITIONS OF USE.....	6
3. SAFETY INSTRUCTIONS.....	6
4. PRODUCT DESCRIPTION.....	8
5. CONTROL PANEL.....	10
6. DIAL AND BUTTONS.....	11
7. DISCOVER YOUR APPLIANCE.....	13
8. FIRST TIME START-UP.....	13
9.  WI-FI - CONNECTIVITY SETUP.....	14
10. PROGRAMS .....	19
11. OPTIONS.....	23
12. MACHINE SETTINGS.....	28
13. BEFORE FIRST USE.....	30
14. DAILY USE.....	31
15. HINTS AND TIPS.....	34
16. CARE AND CLEANING.....	35
17. TROUBLESHOOTING.....	38
18. TECHNICAL DATA.....	40
19. WARRANTY - AUSTRALIA AND NEW ZEALAND.....	41
20. ENVIRONMENTAL CONCERNS.....	43

## 1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible if an incorrect installation and use causes injuries and damage. Always keep the instructions with the appliance for future reference.



- Read the supplied instructions.



Warning: Risk of fire / Flammable materials.

The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.

### 1.1 Children and vulnerable people safety

#### ⚠ WARNING!

Risk of suffocation, injury or permanent disability.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children between 3 and 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children of less than 3 years of age should be kept away from the appliance unless continuously supervised.
- Do not let children play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- Keep detergents away from children.

- Keep children and pets away from the appliance when the door is open.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## **1.2 General Safety**

- Do not change the specification of this appliance.
- If the tumble dryer is put on top of a washing machine, use the stacking kit. The stacking kit, available from your authorized vendor, can be used only with the appliance specified in the instructions supplied with the accessory. Read it carefully before installation (refer to the Installation leaflet).
- The appliance can be installed as freestanding or below a kitchen counter with correct space (refer to the Installation leaflet).
- Do not install the appliance behind a lockable door, a sliding door or a door with a hinge on the opposite side, that would prevent the appliance door from being fully open.
- The ventilation opening in the base must not be covered by a carpet, mat, or any floor covering.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Connect the mains plug to the mains socket only at the end of the installation process. Make sure that the mains plug is accessible after installation.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of unwanted gases into the room from appliances burning gas or other fuels, including open fires.
- **WARNING:** Do not install the appliance in an environment with no air exchange.

The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.

- **WARNING:** In the appliance enclosure or in the built-in structure, keep ventilation opening clear of obstruction.
- **WARNING:** Do not damage the refrigerant circuit.
- If the mains power supply cable is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- Do not exceed the maximum load of 9,0 kg (refer to the "Programme chart" chapter).
- Do not use the appliance if items have been soiled with industrial chemicals.
- Wipe away lint or packaging debris that has accumulated around the appliance.
- Do not run the appliance without a filter. Clean the lint filter before or after each use.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Fabric softeners, or similar products, should only be used as specified by the product manufacturer's instructions.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling,

stacking or storing oil-affected items can prevent heat from escaping and create a fire hazard.

- If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent -this will reduce, but not eliminate, the hazard.
- Remove all objects from items that could be a source of fire ignition such as lighters or matches.
- **WARNING:** Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- Before any maintenance operation, deactivate the appliance and disconnect the mains plug from the socket.

## 2. CONDITIONS OF USE

This appliance is intended to be used in household and similar applications such as:

- farm houses;
- by clients in hotels, motels, bed & breakfast and other residential type environments;

- areas for communal use in blocks of flats or in launderettes.

## 3. SAFETY INSTRUCTIONS

### 3.1 Installation



Warning: Risk of fire / Flammable materials.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Do not install the appliance in an environment with no air exchange  
The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.

- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not install or use the appliance where the temperature can be lower than 5°C or higher than 35°C.
- The floor area on which the appliance is to be installed must be flat, stable, heat resistant and clean.
- Make sure that there is air circulation between the appliance and the floor.
- Always keep the appliance vertical when it is being moved.
- When the appliance is in its permanent position, check if it is levelled correctly with the aid of a spirit level. If it is not, adjust the feet accordingly.

## 3.2 Electrical connection

### **WARNING!**

Risk of fire and electric shock.

- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- **WARNING:** This appliance is designed to be installed / connected to a grounding connection in the building.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Do not touch the mains cable or the mains plug with wet hands.

## 3.3 Use

### **WARNING!**

Risk of injury, electric shock, fire, burns or damage to the appliance.



**Warning:** Risk of fire / Flammable materials. The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.

- This appliance is for household (indoors) use only.
- Do not dry damaged (torn, frayed) items that contain padding or fillings.
- If laundry has been washed with a stain remover, carry out an additional rinse cycle before starting a drying cycle.
- Dry only fabrics that are suitable to dry in the appliance. Follow the cleaning instruction on the item label.
- Do not drink or prepare food with the condensed water/distilled water. It can cause health problems to people and pets.

- Do not sit or stand on the open door of the appliance.
- Do not dry dripping wet clothes in the appliance.

## 3.4 Internal lighting

### **WARNING!**

Risk of injury.

- Visible LED radiation, do not look directly into the beam.
- To replace the internal lighting, contact the Authorised Service Centre.

## 3.5 Care and cleaning

### **WARNING!**

Risk of injury or damage to the appliance.



**Warning:** Risk of fire / Flammable materials. The appliance contains flammable gas, propane (R290), a gas with a high level of environmental compatibility. Keep fire and ignition sources away from the appliance. Be careful not to cause damage to the refrigerant circuit containing propane.

- Do not use water spray and steam to clean the appliance.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- Be careful when you clean the appliance to prevent damage to the cooling system.

## 3.6 Compressor

### **WARNING!**

Risk of damage to the appliance.

- The compressor and its system in the tumble dryer is filled with a special agent which is free from fluoro-chloro-hydrocarbons. This system must stay tight. The damage of the system can cause a leakage.

### 3.7 Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

### 3.8 Disposal

**⚠ WARNING!**

Risk of injury or suffocation.




Warning: Risk of fire / Risk of material damage and damage to the appliance.

- Disconnect the appliance from the mains electrical and water supplies.

- Cut off the mains electrical cable close to the appliance and dispose of it.
- The appliance contains flammable gas (R290). Contact your municipal authority for information on how to discard the appliance correctly.
- Remove the door catch to prevent children or pets from becoming trapped in the drum.
- Dispose of the appliance in accordance with local requirements for the disposal of Waste Electrical and Electronic Equipment (WEEE).

## 4. PRODUCT DESCRIPTION

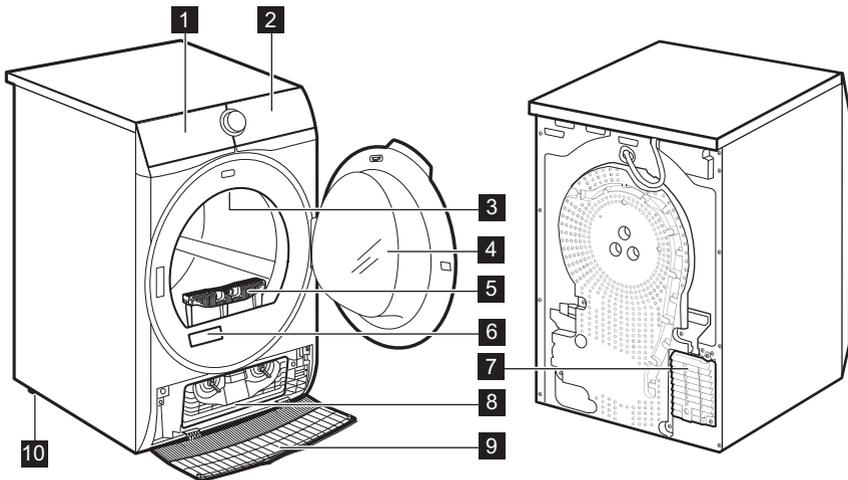


- 1** Water container
- 2** Control panel
- 3** Internal light
- 4** Appliance door
- 5** Filter
- 6** Rating plate
- 7** Airflow slots
- 8** Condenser lid

- 9** Condenser cover
- 10** Adjustable feet



For ease of loading laundry or ease of installation the door is reversible (see the separate leaflet).

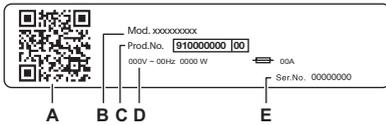

**The rating plate reports:**

- A. QR code
- B. model name
- C. product number
- D. electrical ratings
- E. serial number

Scan the **QR code** with the camera to download our App from the app store on your smart device and follow the required steps. Register your product and get the most out of it.

-  Access your appliance details, documentation and articles on how to use the best features (User Manual also available at [electrolux.com/manuals](http://electrolux.com/manuals) )
-  Get usage advice, troubleshooting, service and repair information (also available at [electrolux.com/support](http://electrolux.com/support) )
-  Buy accessories, Consumable and Original Spare parts for your appliance (also available at [electrolux.com/shop](http://electrolux.com/shop) )


**4.1 Electrical connection**

At the end of installation you can connect the mains plug to the mains socket.

The rating plate and the 'Technical Data' chapter indicate the necessary electrical ratings. Make sure that they are compatible with the mains power supply.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances may also be in use.

**Connect the appliance to an earthed socket.**

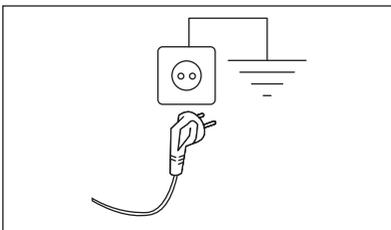


The power supply cable must be easily accessible after installing the appliance.

For any electrical work required to install this appliance, contact our Authorised Service Centre.

The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.

## 5. CONTROL PANEL

### 5.1 Control Panel

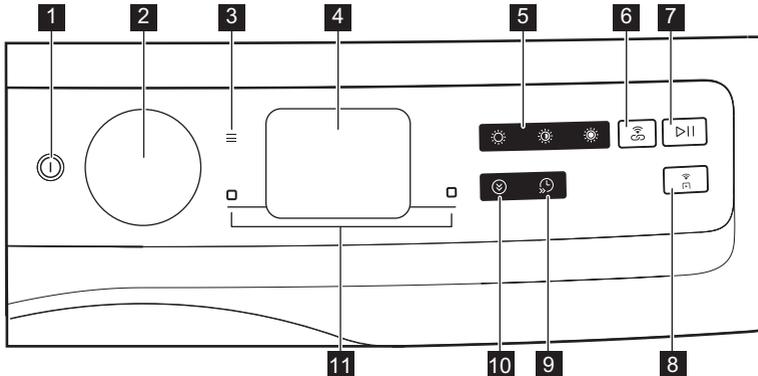

- 1** ⓐ On/Off button
- 2** Program dial
- 3** ≡ Menu touch button
- 4** Display
- 5** Direct access to dryness level:
  - ☀ Extra dry touch button
  - ☀ Cupboard dry touch button
  - ☀ Iron dry touch button
- 6** 📶 SyncDry touch button
- 7** ▶|| Start/Pause touch button
- 8** 📶 Remote start touch button
- 9** 🕒 Time Save touch button
- 10** 🍃 Energy save touch button
- 11** □ Soft buttons:
  - Right Soft button
  - Left Soft button



Press the touch buttons with your finger in the area with the symbol or name of the option. Do not wear gloves when you operate the control panel. Make sure that the control panel is always clean and dry.

### 5.2 SmartSelect

This new interface area is designed with the aim of guiding the user through sustainable choices, and providing an improved and direct way of selecting the cycles and options with minimum effort. An indication on the sustainability will be given through the SmartLeaf indicator (see chapter *Control Panel: SmartLeaf feedback*).



For more details refer to SmartSelect section in "Dials and buttons" chapter.

### 5.3 🍃 SmartLeaf feedback

SmartLeaf feedback shows how energy-efficient a program is, based on energy consumption weighted on program's rated capacity.

There are four different levels of SmartLeaf feedback indicated by the leaf icon:

1. No leaf lit indicates an average consumption level or no indication possible (for Time based cycles).
2. 🍃 one leaf indicates a good energy consumption level.
3. 🍃 two leaves indicates a very good energy consumption level.

4.  three leaves indicate the best consumption level.

## 5.4 Main symbols legend

Symbol	Description	Symbol	Description
	SmartLeaf indicator.		Favourite indicator.
	anti-crease indicator.		extra silent indicator.
	Wi-Fi connection indicator.		child lock on.
	finish in indicator.		indicator: <i>clean filter</i>
	Notification indicator.		indicator: <i>check Heat Exchanger</i>
	indicator: <i>drain the water container</i>		

## 6. DIAL AND BUTTONS

### 6.1 Introduction



The options/functions are not available with all drying programs. Check the compatibility between options/functions and drying programs in the "Option table". An option/function can exclude another one, in this case the appliance doesn't allow you to set incompatible options/functions.



Picture are indicative it could be some different depending on tumble dryer model.

### 6.2 On/Off button

Press and hold briefly this button for a few seconds to activate or deactivate the appliance. A dedicated jingle sound while switching the appliance on or off, lights and display switches on and Start/Pause button led pulse.

During the first switch on of the appliance, the system shall require to setup the appliance




**The default selected program, at machine switch on, is always the Eco program, also after wake up from standby.**

### 6.3 Program dial

By rotating the program dial it is possible to select the desired program.

### 6.4 Menu

Tap the  button to enter inside the option.

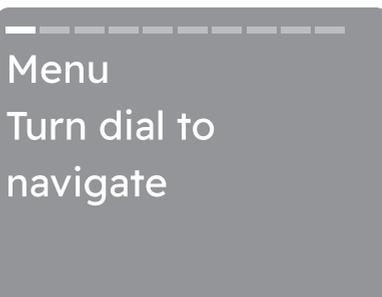

Turn the dial to navigate. To activate/deactivate an option tap the  right soft key touch button.


To exit the  menu user shall:

- press the menu button again;
- press the quick select button;
- press the remote button;
- wait a timeout of 10 seconds.

## 6.5 Right/Left soft keys

The two soft keys  buttons are located on the right and the left of the display.

Tap the right soft key  to prompt the action that appears on the right bottom of the display (ex. Finish In, go back in the menu,...).

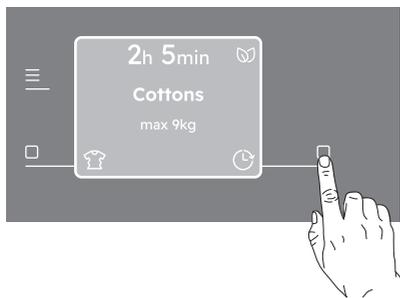

Tap the left soft key  to prompt the action that appears on the left bottom of the display (e.g.  Extra Anticrease,  Final dryness level for Wool program, activate or deactivate an option.)



## 6.6 Start/Pause

Tap the  Start/Pause button to start, pause the appliance or interrupt a running program.

## 6.7 Remote start

A quick touch of this button  activates the Remote Start function that allows you to start, pause and stop the appliance remotely.

The related led comes on and the related icon appears on display.

To exit this state, tap again the button; the related icon turns it off.



If the door is open, the Remote start is deactivated.

## 6.8 SmartSelect

### Dryness Levels

Easy direct access to dryness level with one simple touch.

For drying the three possible choices are:

1.  Iron dry  
This option is recommended to dry garments suitable for ironing.
2.  Cupboard dry  
It is the default drying level selected for most program, and it is indicated for items to be stored.
3.  Extra dry  
This option is recommended for towelling materials.



To activate one of this options turn the dial to select the desired program. The default dryness level icon light on. To change it tap on the related icon.

### Energy save

This option reduces the cycle power consumption on automatic drying programs only.

When set, the related button LED is lighted on and cycle time digits show updated cycle duration.

### **Time Save**

This option reduces the cycle duration on automatic drying programs .

When set, cycle time digits show updated cycle duration in "hours : minutes" format.



When Time Save option is selected the compressor noise can increase.

### **SyncDry**

This feature lets your tumble dryer to automatically set the most appropriate program that matches the last washing program recently executed. All you need to do is start the drying program once your tumble dryer is loaded. No other program settings or options are required on the tumble dryer.

Once the washing program has come to an end, the washing machine transfers the program data via the home router Wi-Fi to the Electrolux Cloud, as well as to your tumble dryer.



In order to use the SyncDry function, the Electrolux tumble dryer and washing machine must be paired with our app.

To activate the function:

1. Once the wash cycle has come to an end, place the clean laundry in the tumble dryer.
2. Touch **SyncDry** button.
3. The appliance is retrieving data from the cloud.
4. Display will update itself automatically with the suggested program. After 10 seconds, if data retrieving is unsuccessful, the button LED is switched off and the machine gives an acoustic error signal. Then previously selected program is restored.
5. Touch  Start/Pause button to begin drying process.



When **SyncDry** program is set, user is still allowed to change options or select another program by rotating knob or using APP. In such cases **SyncDry** button LED will turn off to indicate that the program is not anymore the suggested one; **SyncDry** automatic program can be selected again by pressing related button until data is available on Cloud.

## 7. DISCOVER YOUR APPLIANCE

The first time you turn the appliance on, the display guided through some information related to the appliance.

If user skipped it during first power on, it will show again on the next power up after start


up. If user has press skipped for the second time, do not show anymore.

## 8. FIRST TIME START-UP

The first time you turn the appliance on, you are guided through the initial setup procedure.

## 8.1 Language setup

Scroll through the list of languages by rotating the knob to find the desired language and select it by pressing the right soft key.

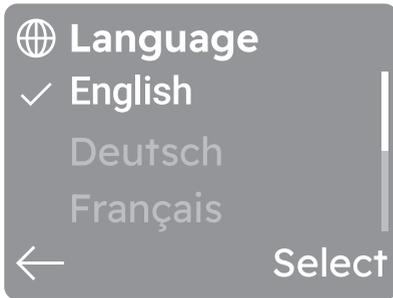

By turning the knob the selected language will be visible in white colour.

## 9. WI-FI - CONNECTIVITY SETUP

This chapter describes how to connect the smart appliance to the Wi-Fi network and to link it to a mobile devices.


By this functionality you can receive notifications, monitor and control your tumble dryer from your mobile devices.

To connect the appliance to enjoy the full range of features and services you need:

- Wireless network at home with internet connection enabled.
- Mobile device connected to wireless network.

<b>Frequency</b>	2.4 GHz for ANZ market
<b>Protocol</b>	IEEE 802.11b/g/n two stream radio
<b>Max power</b>	< 20dBm

### 9.1 QR code on rating plate

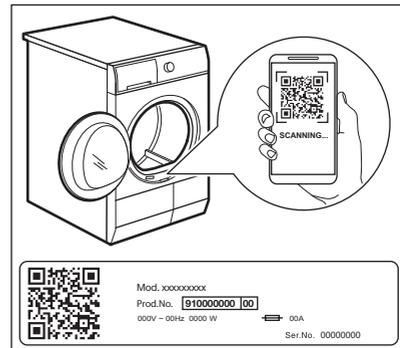

#### QR code can be used in two ways:

- Scan the QR code with the built-in camera app to download our app from the App store on your smart device and follow the required steps.
- Pairing your smart device with appliance to simplify the process. Scan the QR code with QR code scanner built-in our app.

### 9.2 Installing our app

When connecting the tumble dryer to the application, stand near it with Your smart device.

Make sure that your smart device is connected to the wireless network.

1. Go to the App Store on your smart device or scan QR code (see chapter "QR code on rating plate").
2. Download and install our app.
3. Start the application. Select the country and language and login with Your email and password. If you do not have an account, create a new one following the instructions in our app.


### 9.3 Configuring the dryer wireless connection

Have our app downloaded and installed on your smart device.




You can also configure the dryer wireless connection by pushing the Remote start button about 5 second.


1. In our app - tap on Add appliance and follow the instructions on the App for appliance connection.
2. Press the on/off button for a few seconds to activate the appliance.
3. Tap on the **Menu** soft key, rotate the dial until the display shows **Machine settings**.

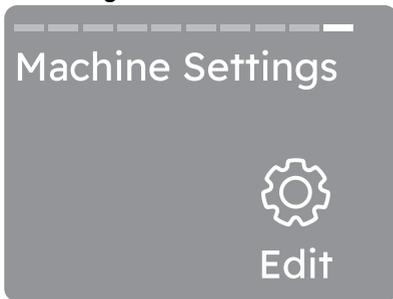


4. Tap the right soft key to enter to the machine settings.
5. Rotate the dial until the display shows **Wifi** screen.

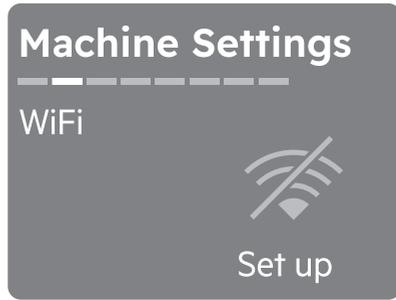

6. Tap the right soft key to set up WiFi connection. The wireless module begins starting up. It may takes about 10 seconds before it is ready.

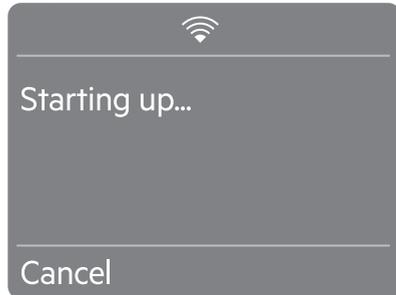


When the wireless module is ready the following screen pops up (**Ready to connect**):

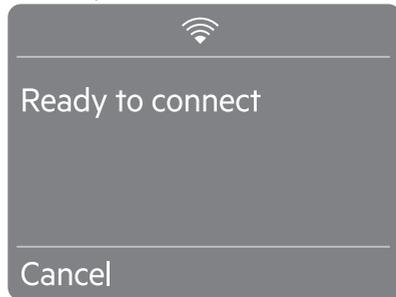

The access point will be open for about 5 minutes.

7. Configure our app on your smart device. If the connectivity is configured following screen pops up (**Connection successful**):

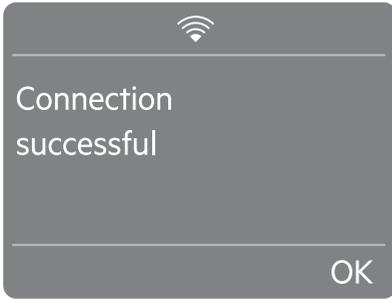

- Tap the right soft key  (**OK**) to get back to home screen.



Every time you switch the appliance on, the appliance takes 10 seconds to connect to the network automatically.

#### Connecting to a different network (Reopening Access Point)


Every time user tap and hold  Remote start key button for 5 seconds, the access point will be open and broadcasted. New network credentials received at this point will overwrite previously saved credentials, and the appliance then connects to the new Wi-Fi network.

### 9.4 Turning Off Wi-Fi



If the user decides to no longer connect the appliance to Wi-Fi, he can tap and hold  Remote start key button for 10 seconds and the appliance will reset and turn off.

- Press the on/off button for a few seconds to activate the appliance.
- Tap on the **Menu**  soft key, rotate the dial until the display shows **Machine settings**.

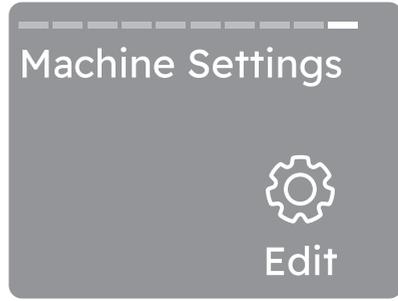


- Tap the right soft key  to enter to the machine settings.
- Rotate the dial until the display shows **Wifi** screen.




- Tap the right soft key  to edit WiFi connection.
- Rotate the dial until the display shows **Reset network** screen.




- Tap the right soft key  (**Next**). The following screen pops up (**Reset network credentials?**):

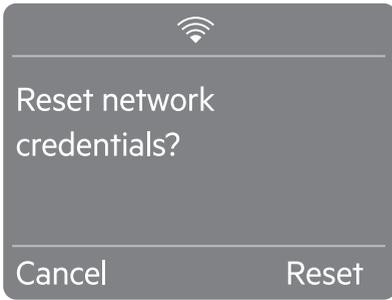

8. Tap the right soft key  (**Reset**) to confirm your choice. The network credentials begins resetting.

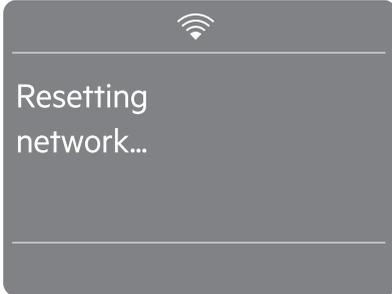


After a few seconds the following screen pops up (**Network is reset**):

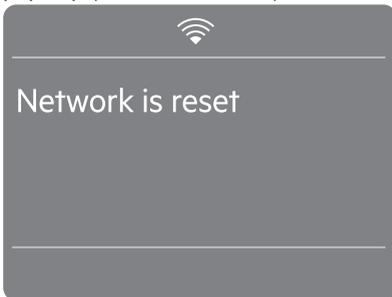


## 9.5 Network information

When the App is installed and the wireless connection is complete, you can check a few information regarding connection and network.


1. Press the on/off button for a few seconds to activate the appliance.
2. Tap on the **Menu**  soft key, rotate the dial until the display shows **Machine settings**.

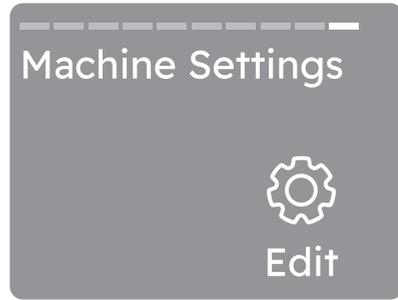

3. Tap the right soft key  to enter to the machine settings.
4. Rotate the dial until the display shows **Wifi** screen.

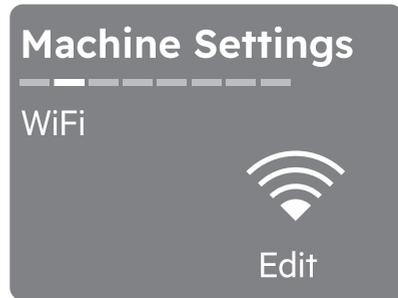


5. Tap the right soft key  to enter the following screen:

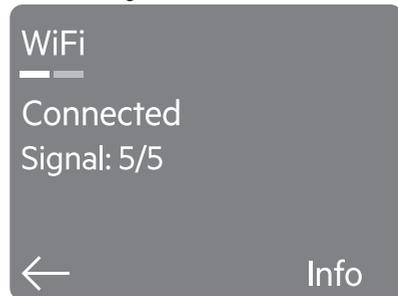

here you can check:


- Status of connection ( e.g **Starting up...**, **Not connected**, **Connected**)
  - Signal strength
6. Tap the right soft key  (**Info**) to enter the following screen:

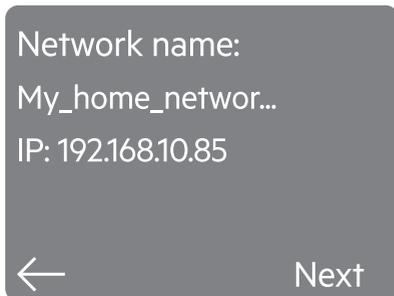

here you can check:

- Network name
- IP address of your dryer

7. Tap the right soft key  (Next) to enter the following screen:

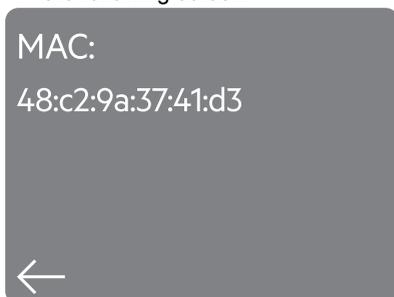

here you can check:

- MAC address of your dryer

8. Tap the left soft key  (←) a few times to go back to the machine settings screen.

## 9.6 Remote start

A quick touch of this button  activates the Remote Start function that allows you to start, pause and stop the appliance remotely.

The related led comes on and the related icon appears on display.

To exit this state, tap again the button; the related icon turns it off.



If the door is open, the Remote start is deactivated.

Press and hold this button for longer time to provide two other functions:

- hold it down for 5 seconds to connect to a different network.
- hold it down for 10 seconds as soon as double beep sounds to switch off WiFi.

## 9.7 Over-the-air update

### WARNING!

During the update it is highly recommended to not turn off or unplug the appliance.

The App may propose an update for downloading new features.

The update is accepted via App only.

If a program is running, the App notifies that the update will start at the end of the program.

During the update, the following message pops upon the display: **Don't turn off the appliance**

The appliance will be usable again at the end of the update, without any notification about successful update.

If an error occurs, the following message pops upon the display: **Update failed**. Press  (OK) right soft key to return to normal use.

## 9.8 Wi-Fi Always On

The Wi-Fi Always On function can be activated only via our app.

This feature keeps the appliance connected to the network even when the appliance is turned off, so that it can always be woken up and managed remotely from your device.

The indicator  goes on and off intermittently.

It is possible to turn the appliance on by pressing the  on/off button or through the App.



The Wi-Fi Always On function may affect your energy consumption. Wi-Fi Always On function is disabled by default.


## 10. PROGRAMS

### 10.1 ⓘ Program Information

By rotating the program dial to select a desired program, there is a possibility to display the program information screen.

If there is information on a program, the ⓘ info icon is visible in the bottom right corner.

- Tap the right soft key 

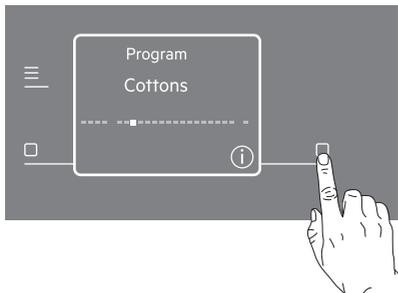

The information screen appear and can be dismissed pressing **OK** or automatically disappear after few seconds.

### 10.2 Program table

Program	Load <sup>1)</sup>	Properties / Fabric type <sup>2)</sup>
Cottons Eco <sup>3)</sup>	9,0 kg	Program suitable to dry wet cotton laundry and it is the most efficient program in terms of energy consumption for drying wet cotton laundry. Dryness level is not adjustable and it is set by default to Cupboard dry / ready to store. / 
MixCare	6,0 kg	Mix of garments made of cotton, cotton-synthetic blend and synthetic fabric. / 
Cottons	9,0 kg	White and coloured cotton fabrics program. Default setting is for ready to store dryness level. / 
Synthetics	4,0 kg	Blended garments containing mostly synthetic fibres like polyester, polyamide, etc. / 
Delicates	2,0 kg	Recommended for generic delicate fabrics such as viscose, rayon, acrylic and their blends. / 
Wool  	1,0 kg	Gently dries for machine and hand-washable woollens. Remove immediately the items when the program is completed.
Rapid 3kg	3,0 kg	Fast cycle for everyday clothes made of cotton, cotton-synthetic blends and synthetic. Ideal for light items. / 

Program	Load <sup>1)</sup>	Properties / Fabric type <sup>2)</sup>	
Bed Linen XL	4,5 kg	Dries up to three bed linen sets at once. Minimises twists and tangles of large items to ensure every bed linen reaches a uniform dryness without wet spots.	/ 
Jeans	4,0 kg	Deeply dries jeans and other denim garments, even in thick parts like pockets, seams, and cuffs reducing entanglement.	/ 
Outdoor 	2,0 kg	Maintains the functionality of outdoor fabrics made of technical textile and restores water repellency on waterproof jackets and shell jackets with removable linings (suitable for drying in tumble dryer).	/ 
Down Jacket 	2,0 kg	An automatic program that precisely dries even the internal insulation of jackets with feather, down, or synthetic filling. Maintains garment appearance and thermal functionality.	/ 
Sportswear	4,0 kg	Dries generic sportswear made with synthetic fibres including polyester, elastane blends, and polyamide.	/ 
1 Item Fast	1 item	Specially designed to quickly dry one item or a very small load that you need to wear as soon as possible.	/ 
Silk 	0,5 kg	Preserves the shape of delicate machine and hand-washable silk clothes, minimizing creases by using gentle warm air and soft movements.	/ 
Hygiene 	5,0 kg	Dries and sanitizes your garments and other items maintaining the temperature above 60°C over time, removing 99.9% of bacteria and viruses <sup>4)</sup> . Note: This cycle should only be used for wet items. Not suitable for delicate items.	/ 
Easy Iron	2,0 kg	Limits creases on small loads of cotton, synthetic and mixed-fabric garments for easy ironing. Features two drying levels: Iron leaves garments slightly damp for ironing or hanging; Cupboard fully dries items.	/ 
Refresh	1,0 kg	<b>For dry clothes only</b> Short low temperature cycle that helps in removing odours from a small amount of garments. Indicated also for dry clothes that were in storage for long time.	/ 

1) The maximum weight refers to dry items.

2) For fabric mark meaning see chapter *HINTS AND TIPS: Preparing the laundry*.

3) Cotton Eco program is the reference program for Energy Label, tested according to AS/NZS2442.2.

4) Tested for Escherichia coli, Candida albicans and MS2 Bacteriophage. Independent test performed by Swissatest Testmaterialien AG in 2021 (Test Report No. 20212038).




The wool drying cycle of this machine has been tested and approved by The Woolmark Company. The cycle is suitable to dry wool garments which are labelled “hand wash” provided that the garments are washed in a Woolmark endorsed hand washing cycle and dried according to the instructions issued by the manufacturer of this machine. M2419  
The Woolmark symbol is a Certification mark in many countries.

## 10.3 Additional Programs

At the end of the program list, there is a single position where it is possible to navigate to the secondary list called **More programs**.




If there are no more programs to be displayed on the last position in the **More programs** screen, there will be **Reset** option instead of More.

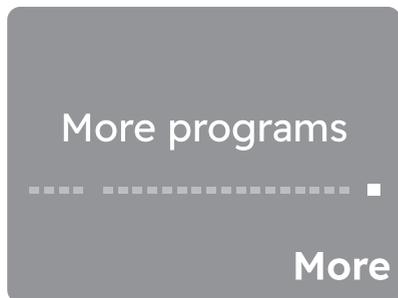

Press the right soft key next to **More** indication to enter the extra programs list. Navigating this list works just like navigating the main list.

To go back to the main list, turn the rotary to the left to the **Back to main list** position and press the left soft key next to **Back** indication.

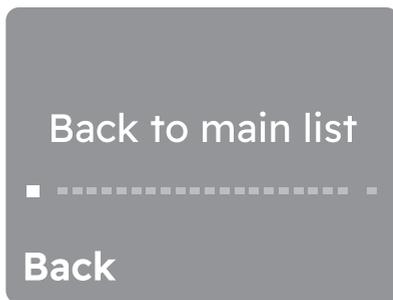

## List of default additional programs

Our app provides you with a **wide choice of additional programs**. Connect the appliance to our app and you will be able to choose the program that suits your needs most.



Program names are subject to change depending on market requirements without notice.


The App will give you a complete description of each program.

Duvet	Anti-Allergy
Towels	Pet Hair
Drying Rack	Pillow
Training Gear	Baby
Soccer/Rugby	Linen
Skiing Gear	Curtains


## Reset additional program list to factory default

At the end of the more programs list, if the user has customised the program list in the app, there is an option to reset it to the factory default list.

1. Rotate the dial to the end of **More programs** screen. The display shows **Reset list** screen.

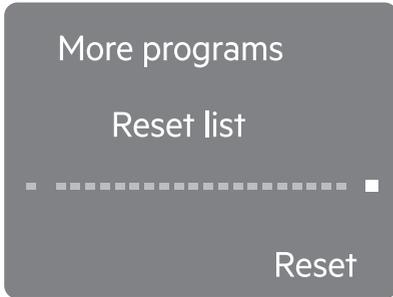

2. Taping the right soft key  (**Reset**) will bring up a dialogue asking to cancel or confirm.

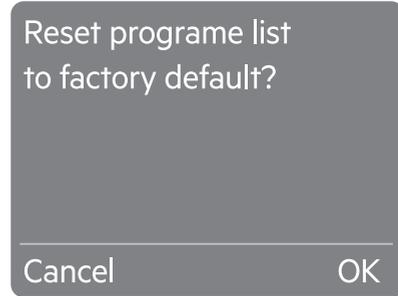

3. Tap the right soft key  (**OK**) to reset the additional program list to the factory default.

## 10.4 Program options compatibility

Programs <sup>1)</sup>	Dryness Level 			 Extra anti-crease	 Re-verse plus	 Extra silent	 Time dry
							
Cottons Eco		■		■			
MixCare	■	■		■	■		■
Cottons	■	■	■	■	■	■	■
Synthetics	■	■	■	■	■	■	■
Delicates		■		■			
Wool  							
Rapid 3kg		■		■			
Bed Linen XL	■	■	■	■	■		■
Jeans	■	■		■			
Outdoor 		■		■			
Down Jacket 	■	■		■			
Sportwear		■		■			

Programs <sup>1)</sup>	Dryness Level			Extra anti-crease	Reverse plus	Extra silent	Time dry
	☀	☀	☀				
1 item Fast		■		■			
Silk 		■		■			
Hygiene 	■			■			
Easy Iron		■	■	■			
Refresh				■			


1) Together with the program you can set 1 or more options. To activate or deactivate them, press the related touch button.

## 11. OPTIONS

### 11.1 Final dryness level for Wool program.

Option suitable for Wool program to adjust final dryness level.

- Tap the left soft key  to set desired dryness level for Wool program.

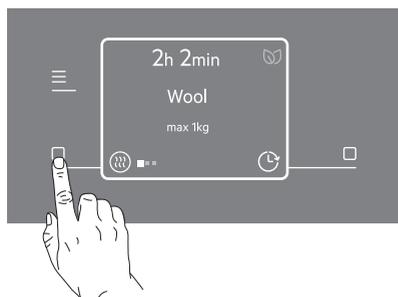

There are three default dryness levels available.

- ■■■ Standard
- ■■■ Extra
- ■■■ Maximum

### 11.2 Time dry

You can set the program duration, from a minimum of 10 minutes to a maximum of 2

hours. The required duration is related to the quantity of laundry in the appliance.



We recommend that you set a short duration for small quantities of laundry or for only one item.

#### TIME DRYING RECOMMENDATION

10 - 20 min	action of cool air only (no heater).
20 - 40 min	additional drying to improve dryness after previous drying cycle.
>40 min	full drying of the small laundry loads up to 4 kg, well spun (>1200 rpm).

To **activate** this option:


- Tap on the **Menu**  soft key, rotate the dial until the display shows the Time dry option.



- You can activate this option by pressing the right soft key . The display shows the minutes or hours of the time drying.



- Pressing the right soft key  it is possible to increase the time by 10 minutes with each tap, up to 2 hours.

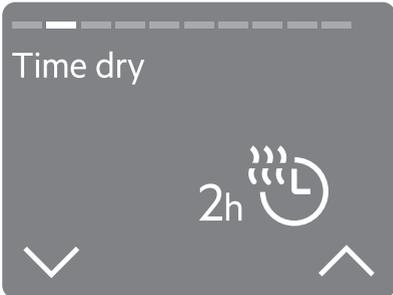

- If you want to decrease time tap the left soft key , the duration will be reduced by 10 minutes with each tap.
- Once you have selected the desired timer wait 3 seconds or tap **Menu**  and you will be redirected to the home screen where at the top of the display you will be able to see the time drying.



To **remove** the **time drying** option, select another program by rotating the program dial or:

- Navigate through the **Menu**  to the **Time Dry** option.
- Reduce the time by pressing the left soft key until the display shows **OFF**

### 11.3 Extra anti-crease

This option extends the anti-crease phase by 90 minutes at the end of the drying cycle. This function reduces creases. The laundry can be removed during the anti-crease phase.


To **activate/deactivate** this option there are two possibilities.

#### By tapping left soft key



if the option available for a selected program on the home screen.

- Tap the left soft key  and the  icon (standard anti-crease) will change to the  icon (extra anti-crease).

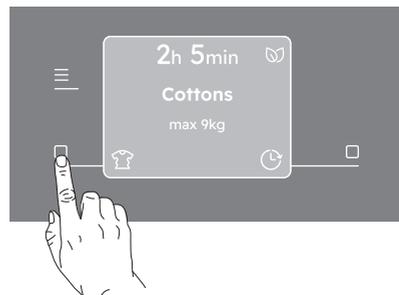

### By selecting option from Menu

Tap on the **Menu**  soft key, rotate the dial until the display shows the Extra anti-crease option.

- Tap the right soft key  and the relevant indicator will turn On/Off.

### 11.4 Reverse plus

Increase drum reversing frequency to reduce items twisting and entanglement. To increase uniformity of drying result and help reduce creases. Recommended for large or long items (e.g. sheets, trousers, long dresses).

Tap on the **Menu**  soft key, rotate the dial until the display shows the **Reverse plus** option.

To **activate/deactivate** this option:

- Tap the right soft key  and the relevant indicator will turn On/Off.

### 11.5 Extra silent

The appliance operates with low noise without effect on the drying quality. The appliance operates slowly with longer cycle time.

Tap on the **Menu**  soft key, rotate the dial until the display shows the **Extra silent** option.

To **activate/deactivate** this option:

- Tap the right soft key  and the relevant indicator will turn On/Off.

### 11.6 End alert

The buzzer sounds at the:

- cycle end
- start and end of the anti-crease phase
- cycle interruption

The buzzer option is by default always on. You can use this option to activate or deactivate the sound.

Tap on the **Menu**  soft key, rotate the dial until the display shows the **End alert** option.

To **activate/deactivate** this option:

- Tap the right soft key  and the relevant indicator will turn On/Off. If End alert option is deactivated, the display shows the  End alert off icon.




If the **Cycle End Alarm** is OFF (see **Machine settings** menu), End alert option is not available.

### 11.7 Finish In

With this option you can set the time to end of the selected cycle.

To **activate** this option:

- Tap on the **Menu**  soft key, rotate the dial until the display shows the **Set timer to finish in** option.

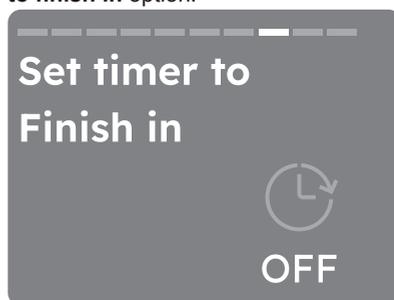

- You can activate this option by pressing the right soft key . The display shows the hours of the time to end starting from 3 hours.

Set timer to  
Finish in

3h 



- Pressing the right soft key  it is possible to increase the time by one hour with each tap, up to 24 hours.

Set timer to  
Finish in

24h 



- If you want to decrease time tap the left soft key , the duration will be reduced by one hour with each tap.
- Once you have selected the desired timer wait 3 seconds or tap **Menu**  and you will be redirected to the home screen where at the top of the display you will be able to see the countdown.

8h 



**Cottons**

max 9kg



To **remove** the **Set timer to finish in** option.:

- Navigate through the **Menu**  to the **Set timer to finish in** option.
- Reduce the time by pressing the left soft key until the display shows **OFF**

## 11.8 Child lock

With this option you can prevent the children from accidentally operating the appliance.

To **activate** this option:

- Tap on the **Menu**  soft key, rotate the dial until the display shows the **Child lock** option.

Child lock



OFF

- You can activate this option by tapping the right soft key . The display shows the icon On.

Child lock



ON

- After you have activated the child lock all touch buttons are deactivated. It is possible to turn the appliance off by means of the  ON/OFF button.
- Before pressing the Start/Pause button the appliance cannot start.


The display shows the  child lock icon.




The appliance keeps the selection of this option after you switch it off.

To **deactivate** this option:

- Hold the right soft key  for 3 seconds. A countdown will be visible in the display in the lower right corner.

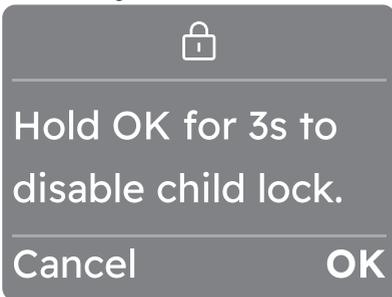

Once the option is deactivated the display will show the information as before activation,

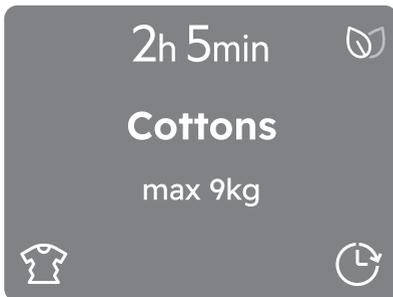

## 11.9 ♥ Favourites

### How to set a favourite cycle

Up to three favourite cycles can be saved.



There are no favourite cycles saved by default.

Tap on the **Menu**  soft key, rotate the dial until the display shows the Favourites option.

To **save** your favourite cycle:

- Select one of the three empty fields by tapping the right soft key.
- After two seconds, the display will show the selected cycle as a favourite recognizable by a heart at the top of the screen.



When you want to save the next favourite the first empty slot will be indicated automatically.

### How to replace a favourite cycle

It is possible to **replace** favourites:

- Turn dial to select one of the three fields to be overwritten.
- Confirm the choice by tapping the right soft key.
- After two seconds, the display will show the selected cycle as a favourite recognizable by a heart at the top of the screen.



In order to delete favourites it is necessary to perform a factory reset of the appliance or by the app.

### How to access the favourites cycle

To access the favourites from programs list rotate the dial to the left.




If the fields are occupied the first favourite cycle will be displayed, then the second and eventually the third.



If the fields are empty, a suggestion on how to save new favourites will be displayed.

## 12. MACHINE SETTINGS

In this part are explained the main settings of the appliance.

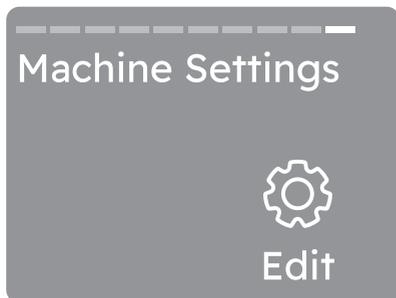

### 12.1 Language setup

It is possible to **change the display language** by scrolling through the list rotating the knob to find the desired language.

- Select it by tapping the right soft key
- Go back to the previous view by tapping the left soft key .



By turning the knob the selected language will be visible in white.

### 12.2 Default Dryness

With this setting you can change the default dryness.



This may be necessary since the dryness results are impacted by many conditions, e.g. the water type, the supply voltage or the ambient temperature etc.

#### HOW TO ACHIEVE A PERFECT DRYING:

1. Try to adjust the dryness level options (see "*Dial and buttons*" *SmartSelect - Dryness Level*' option).
2. If you want to further increase the laundry dryness results, you can modify the default dryness setting (see below). This adjustment will act on most programs, except **Eco**, Wool, Duvet, Down Jacket, Refresh programs if available on the machine.

To **modify** the level:

- Tap the left soft key next to indicator to decrease default dryness.
- Tap the right soft key next to indicator to increase default dryness.

There are three default dryness levels available.

- Standard
- Extra
- Maximum

Rotate the dial to move to the next setting.

### 12.3 Tank reminder

With this setting you can turn activate/deactivate the tank reminder.

By default, the tank reminder indicator is on. It comes on when the program is completed or when it is necessary to empty the water container.

Tap the right soft key to activate/deactivate the tank reminder.



If a draining kit is installed (additional accessory), the appliance automatically drains the water from the water container. In this case we recommend that you deactivate the indicator of the water container.

Rotate the dial to move to the next setting.

## 12.4 Button sounds

With this setting you can turn off the sound of the buttons.

To **activate/deactivate** the sounds:

- Tap the right soft key  and the relevant indicator will turn On /Off .

Rotate the dial to move to the next setting.



The sound of the on/off button cannot be disabled

## 12.5 Cycle end alarm

With this setting you can change the cycle end alarm.

To **activate/deactivate or modify** the sound:

Tap the soft key next to or indicator to modify the cycle end alarm.

With this setting you have four possible choices:

- Long
- Medium
- Short
- Off

## 12.6 Display Brightness

With this setting you can change the display brightness.

To **modify** the level:

- Tap the left soft key next to indicator to decrease brightness.
- Tap the right soft key next to indicator to increase brightness.

Rotate the dial to move to the next setting.



There are five brightness levels available.

## 12.7 Guides

With this option you can see brief explanations of some features.

Rotate the program dial and select by tapping the right soft key  one of the following option:

- **Introduction**: information about the control panel, the SmartSelect, menu, soft keys and Remote start.
- **WiFi**: information about the onboarding



Go back to the previous view by tapping the left soft key .

## 12.8 Operating hours counter

This function gives a possibility to display the total operating time of the appliance in hours, which is counted from the moment it is first switched on. The actual operating time of the cycles is shown (does not include pauses or delayed start time).



Hours counted are not deleted by the **reset to factory settings**.

## 12.9 Reset to Factory Settings

With this setting you can reset your appliance to the factory settings.

1. Tap on the right soft key  to enter the option.
2. Tap on the left soft key  to undo.
3. Tap on the right soft key  to confirm the reset.  
Performing the reset will take a few seconds



Reset to factory settings deletes permanent options and favourites saved.

## 13. BEFORE FIRST USE



Rear drum locks are removed automatically when dryer is activated for the first time. Possible to hear some noise.

### To unlock the rear drum locks:

1. Switch on the appliance.
  2. Set any program.
  3. Press the Start/Pause button.
- Drum starts to rotate. Rear drum locks are automatically deactivated.

### Before you use the appliance to dry items:

- Clean the tumble dryer drum with a moist cloth.
- Start a 1 hour program with moist laundry.



At the beginning of the drying cycle (first 3-5 min) there could be a slightly higher sound level. This is due to the compressor starting up. This is normal for compressor powered appliances such as refrigerators and freezers and tumble dryers.

### 13.1 Unusual smell

The appliance is tightly packed.

After product unpacking you can feel an unusual smell. This is normal for brand new products.

Appliance is built of several different types of material which all together can generate unusual smell.

Over usage time, after few drying cycles unusual smell gradually disappears.

### 13.2 Noises




Different noises may be heard at different times during the drying cycle. They are perfectly normal operating sounds.




When Time Save option is selected the compressor noise can increase.


### Working compressor.

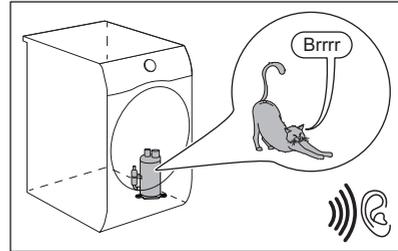


### Rotating drum.

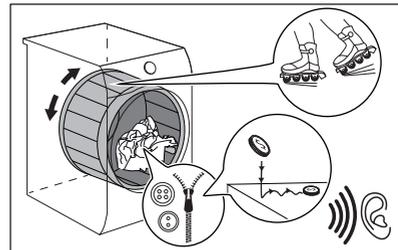

### Working fans.

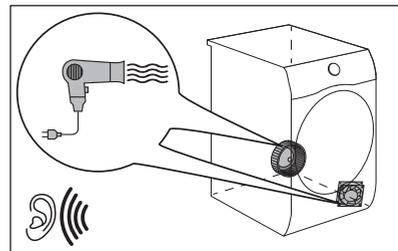


### Working pump and transferring condensation to the tank.

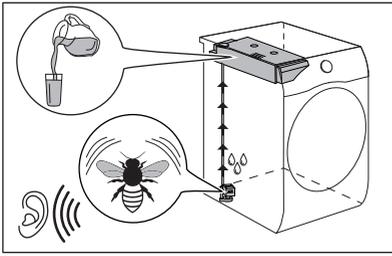

## 14. DAILY USE

### 14.1 Start a program without Finish In option

1. Prepare the laundry and load the appliance.

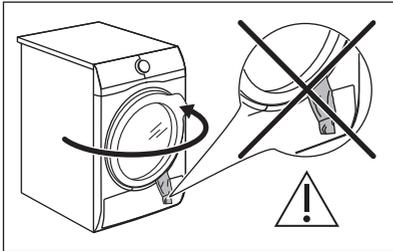


#### ⚠ CAUTION!

Make sure that when you close the door, the laundry does not get caught between the appliance door and the rubber seal.

2. Press the on/off button to activate the appliance.

After a few seconds the display shows program summary view with the following information:

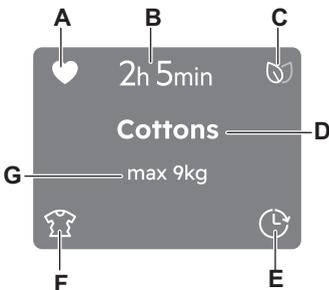

A. Favourite, if already saved.

- B. Program duration
  - C. Eco feedback
  - D. Selected program
  - E. Finish In option.
  - F. Depends on selected program ( e.g.  Extra Anticrease,  Final dryness level for Wool program, .
  - G. Maximum program load.
3. Set the correct program and options for the type of load.




Real drying time will depend on type of the load (quantity and composition), the room temperature and the initial moisture after spinning phase of your laundry.

4. Press the Start/Pause touch button. The program starts and during the first minutes of the cycle, the machine estimates the quantity of loaded laundry to better adapt the cycle profile and duration to effective load.

### 14.2 Starting the program with Finish In option


1. Set the correct program and options for the type of load.
2. Tap the left soft key

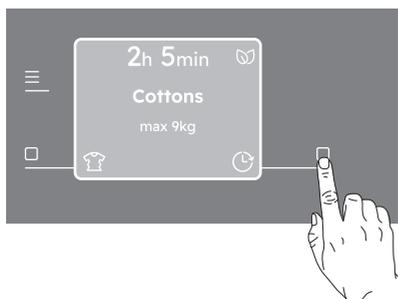

or tap on the **Menu** soft key, rotate the dial until the display shows the **Set timer to finish** in option.

3. Increase or decrease time by tapping soft keys

Once you have selected the desired timer wait 3 seconds or tap **Menu** and you will be redirected to the home screen where at the top of the display you will be able to see the countdown.

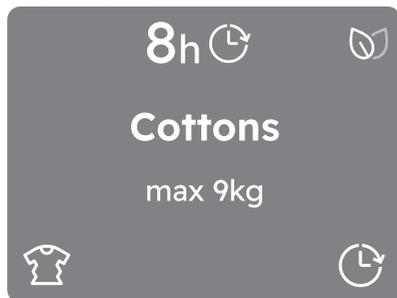

4. Press the Start/Pause touch button. The drum starts rotating to perform the **SensiCare** estimation, if foreseen in the selected program.
5. The appliance starts the countdown to the end of the program and the program will start at the right moment for ending.


### 14.3 The SensiCare System load detection

The SensiCare progress bar moves back and forth to communicate that estimation is in progress, if foreseen in the selected program.



In case of **drum overload**, the maximum declared load the following indicator comes on **Overweight**, during these 30 seconds, it is possible to open the door and remove the exceeding garments. Once removed, touch the Start/Pause button to start the program again. If the laundry amount will not be reduced, the program starts anyway. In this case, it will be not possible to guarantee the best results.

After the SensiCare accomplished estimates the quantity of loaded laundry the appliance starts selected program and display shows following information:

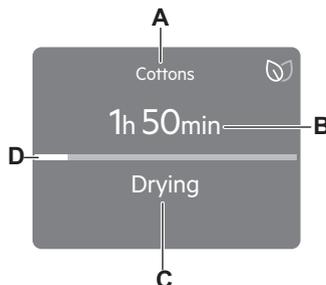

- A. Selected program
- B. Remaining phase time
- C. The phase of a cycle (e.g. drying, cooling)
- D. Progress bar

### 14.4 Change a program

1. Press the on/off button to deactivate appliance

2. Press the ① on/off button to activate the appliance.
3. Set the program.

## 14.5 At the end of the program


### When the program is completed:

- An intermittent acoustic signal operates.
- The display shows the completely filled progress bar and alternately messages pops up:

#### Remove items



#### Anti-crease

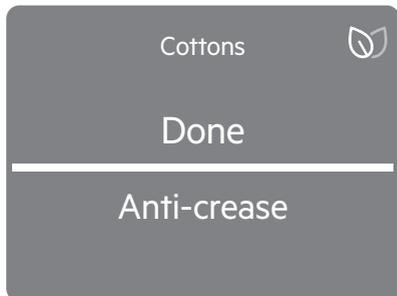

- The ▷|| Start/Pause indicator is on. The appliance continues to operate with the anti-crease phase for approximately 30 minutes or more if Extra anti-crease option was set (see chapter *Option - Extra anti-crease*).

The anti-crease phase reduces creasing.

You can remove the laundry before the anti-crease phase is completed. We recommend, for better results, that you remove the laundry when the phase is almost completed.

### When the anti-crease phase is completed:

- The display shows the completely filled progress bar and alternately messages pops up:


#### Remove items



#### Clean filter



#### Empty water tank

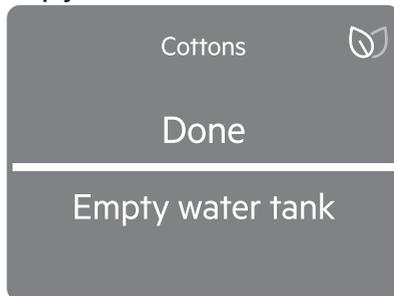

- ▷|| Start/Pause indicator goes off.

1. Press the ① on/off button to deactivate the appliance.
2. Open the appliance door.
3. Remove the laundry.

Possible causes of unsatisfactory drying results:

- Inadequate default dryness level settings. See chapter *OPTIONS: Dryness Level - Adjustment of the target final moisture*

- Room temperature is too low or too high. Optimal room temperature is between 18°-25°C.



**Always clean the filter and empty the water container when a program is completed.**



Leave the door slightly opened after every cycle to avoid moisture.

## 14.6 Low power mode

To reduce energy consumption, this function automatically deactivates the appliance:

- After 5 minutes if you do not start the program.
- After 5 minutes from the end of the program or antcrease phase.



When the appliance goes in low power mode, the display and icons turn off. You can reactivate it by pressing on/off button and the dryer.




**The default selected program, after reactivate from low power mode is always the Cottons Eco program.**



If Wi-Fi is on and remote control is enabled, the remote start  icon remains also when the appliance goes on low power mode.

## 14.7 Notifications and Reminders

If the  icon will pops up in the left upper corner of the display, it indicates that there are notifications or reminders available to be browse.

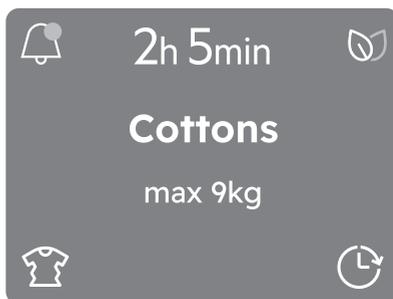

Pressing the  menu key will show the notifications instead of going to the menu start page.

If there are multiple notifications, you can use the rotary or tap right soft key  (**Next**) to walk through the notifications.

If you tap left soft key  (**Skip**), it will dismiss all notifications.

## 15. HINTS AND TIPS

### 15.1 Preparing the laundry



Loading the drum up to the maximum capacity indicated for the respective programs will contribute to the energy saving.



Very often the clothes after washing cycle are kneaded and tangled altogether.

Drying kneaded and tangled clothes is inefficient.

To assure proper air flow and even drying it is recommended to shake and load one by one the clothes to the tumble dryer.

To assure proper drying process:

- Close the zips.
- Close the fasteners of duvet covers.
- Do not dry ties or ribbons loose (e.g. apron ribbons). Tie them before you start a program.
- Remove all items from pockets.
- Turn items with the internal layer made of cotton inside out. Cotton layer must be faced outwards.

- Always set the program suitable for the type of laundry.
- Do not put light and dark colours together.
- Use suitable program for cottons, jersey and knitwear to reduce shrinkage.
- Do not exceed the maximum load stated in the programs chapter or shown on the display.
- Dry only the laundry that is suitable for tumble drying. Refer to the fabric label on the items.
- Do not dry large and small items together. Small items can be trapped inside the large items and remain wet.
- Shake the large clothes, fabrics before placing in the tumble dryer. It is to avoid moist places inside the fabric after the drying cycle.

Fabric label	Description
	Laundry is suitable for tumble drying.
	Laundry is suitable for tumble drying at higher temperatures.
	Laundry is suitable for tumble drying at low temperatures only.
	Laundry is not suitable for tumble drying.

## 16. CARE AND CLEANING

### 16.1 Periodic cleaning schedule

Periodic cleaning helps to extend the life of your appliance.

Indicative periodic cleaning schedule:

Cleaning the filter	When the message or symbol pops up: <b>Clean lint filter</b> 
Empty the water container	When the message or symbol pops up: <b>Empty water tank</b>
Clean the Heat Exchanger	When the message or symbol pops up: <b>Clean condenser</b>

If the appliance is not used for a long time unplug the appliance.

Clean drum	Every two months
Clean the control panel and housing	Every two months
Clean the airflow slots	Every two months

The following paragraphs explain how you should clean each part.

## 16.2 Removing the foreign items



Make sure that the pockets are empty and all loose elements are tied up before running the drying cycle. Refer to the "Preparing the laundry" section.

Remove any foreign items that you may find in the drum after the drying cycle (e.g. metal clips, buttons, coins, etc).

## 16.3 Cleaning the filter

At the end of each cycle the message or symbol pops up: **Clean lint filter**  and you must clean the filter.



The filter collects the lint during the drying cycle.




To achieve the best drying performance clean the filter regularly. The clogged filter causes the longer drying cycle and as a consequence the energy consumption increase. Clean the filter by hand. Use a vacuum cleaner if necessary.


### CAUTION!

When cleaning the filters, the lint should be thrown in the garbage bin and not washed through the drain in order to avoid spreading microplastics in the used water system.


1. Open the door. Pull the filter up.

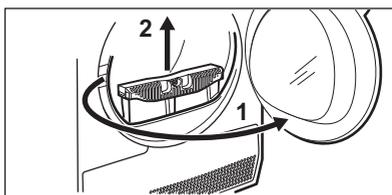

2. Push the hook to open the filter.

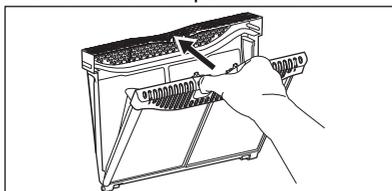


3. Gather lint with hand from both internal parts of the filter.

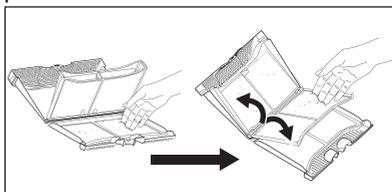


Throw the lint in the dustbin.

4. If necessary, clean the filter with a vacuum cleaner. Close the filter.

5. If necessary, remove lint from the filter socket and gasket. You can use a vacuum cleaner. Place the filter back inside the filter socket.

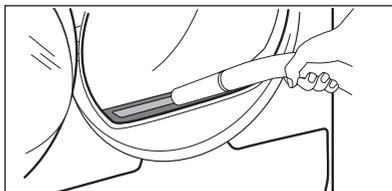

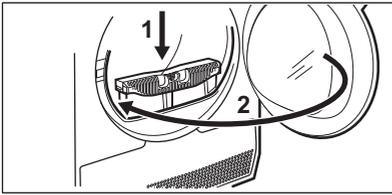


## 16.4 Emptying the water container

Empty the condensed water container after each drying cycle.


If the condensed water container is full, the program stops automatically. The message or symbol pops up: **Empty water tank**  on the display and you must empty the water container.

To empty the water container:


1. Pull the water container out keeping it in a horizontal position.

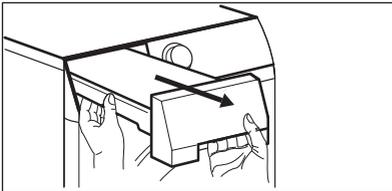

2. Pull the plastic connection out and drain the water into a basin or equivalent receptacle.

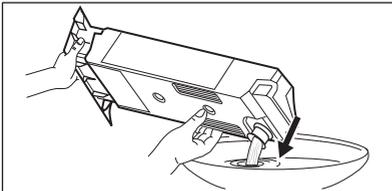

3. Push the plastic connection back in and place the water container back into position.

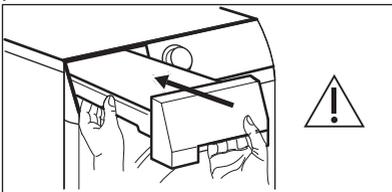

4. To continue the program press the  Start/Pause button.

## 16.5 Cleaning the condenser


If the message or symbol pops up: **Clean condenser**  on the display, inspect the condenser and its compartment. If it is dirty, clean it. Do the check not less than once a 6 months.

### **WARNING!**

Do not touch the metal surface with bare hands. Risk of injury. Wear protective gloves. Clean carefully to avoid damaging the metal surface.


### **WARNING!**

Do not use vacuum cleaner with a hard attachment to remove the fluff from the condenser, it may damages the ribs of the condenser, with leads to lower performance of the appliance and longer time drying.

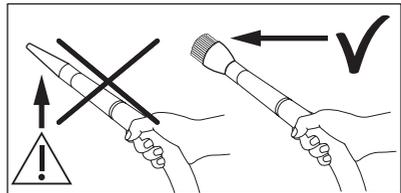


To inspect:


1. Open the door. Pull the filter up.

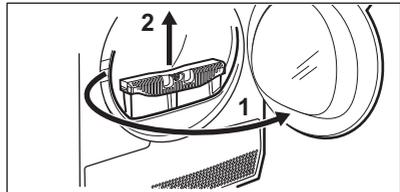


2. Open the condenser cover.

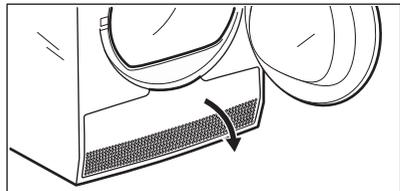


3. Turn the levers to unlock the condenser lid and lower the condenser lid. .

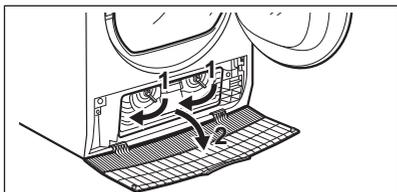


- If necessary, remove the fluff from the condenser and its compartment. You can use a vacuum cleaner with a brush attachment.

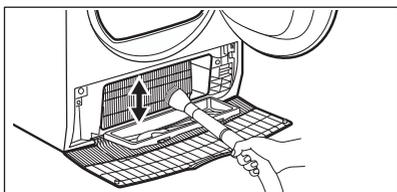


- Close the condenser lid.

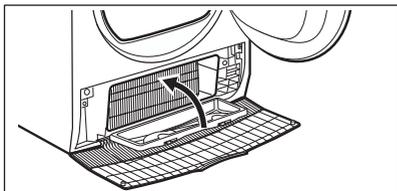

- Turn the levers until it clicks into position.

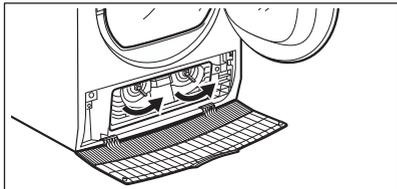

- Put the filter back.

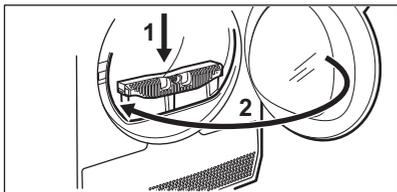

## 16.6 Cleaning the drum

### **WARNING!**

Disconnect the appliance before you clean it.

Use a standard neutral soap detergent to clean the inner surface of the drum and drum lifters. Dry the cleaned surfaces with a soft cloth.

### **CAUTION!**

Do not use abrasive materials or steel wool to clean the drum.

## 16.7 Cleaning the control panel and housing

Use a standard neutral soap detergent to clean the control panel and housing.

Use a moist cloth to clean. Dry the cleaned surfaces with a soft cloth.

### **CAUTION!**

Do not use furniture cleaning agents or cleaning agents which can cause corrosion.

## 16.8 Cleaning the airflow slots

Use a vacuum cleaner to remove fluff from the airflow slots.

## 17. TROUBLESHOOTING

### **WARNING!**

Refer to Safety chapters.

## 17.1 ⚠️ Errors

The appliance does not start or it stops during operation.

First try to find a solution to the problem (refer to the table). If the problem persists, contact the Authorised Service Centre.

### ⚠️ WARNING!

Deactivate the appliance before carrying out any check.

**In case of major problems, the acoustic signals operate, the display shows an error and the  Start/Pause button may flash continuously:**

Error	Possible cause	Remedy
<b>Error. Try restarting the machine</b>	Appliance motor overloaded. Too much laundry or entrapped in the drum.	The program was not completed. Remove the laundry from the drum, set the program and restart the cycle.
<b>E91</b>	Internal fail. No communication between electronic elements of the appliance.	The program was not finished properly or the appliance stopped too early. Switch the appliance off and on again. If the error code appears again, contact the Authorised Service Centre.
<b>Mains voltage is unstable</b>	The mains supply is unstable.	Please wait until main supply is stable than press start. If the appliance paused the cycle without any indication then press the cycle start. If the warning will occur again check the power cord / socket integrity or main supply.

If the display shows other errors, deactivate and activate the appliance. If the problem continues, contact the Authorised Service Centre.

In case of different problem with the tumble dryer check the table below for possible solutions.

## 17.2 Troubleshooting

Problem	Possible solution
You cannot activate the appliance.	Make sure that the mains plug is connected to the mains socket. Check fuse in fuse box (domestic installation).
The program does not start.	Press Start/Pause. Make sure that the appliance door is closed.
The appliance door does not close.	Make sure that the installation of the filter is correct. Make sure that the laundry is not caught between the appliance door and the rubber seal.
The appliance stops during operation.	Make sure that the water container is empty. Press Start/Pause to start the program again. Load is too small, increase the load or use the Time dry program.

Problem	Possible solution
The cycle time is too long or unsatisfactory drying result. <sup>1)</sup>	Make sure that the weight of the laundry is suitable for the duration of the program.
	Make sure that the filter is clean.
	The laundry is too wet. Spin the laundry in the washing machine again.
	Ensure that the room temperature is higher than +5°C and lower than +35°C. Optimal room temperature is 18°C to 25°C.
	Set the Time dry or the Extra dry program. <sup>2)</sup>
The App cannot connect to the dryer.	Check if your smart device is connected to the wireless network. Check your home network and router. Restart the router. Contact your wireless service provider if there are problems with the wireless network.
	The dryer, the smart device, or both, need to be configured again.
The App frequently cannot connect to the dryer.	Try to move the home router as near the dryer as possible or consider purchasing a wireless range extender.
	Turn the microwave off. Avoid using the microwave and the Remote Control of the dryer at the same time. The microwaves disrupt the Wi-Fi signal.

1) After maximum 5 hours, the program ends automatically.

2) It can happen that some area remains humid when drying big items (e.g. bed sheets).

## 18. TECHNICAL DATA

Height x Width x Depth	85,0 x 59,6 x 63,6 mm (maximal 65,9 mm)
Max. depth with the appliance door open	110,2 mm
Max. width with the appliance door open	94,8 mm
Adjustable height	850 mm (+ 15 mm - feet regulation)
Drum volume	118 l
Maximum load	<b>9,0 kg</b>
Voltage	220-240 V
Frequency	50 Hz
Total power	900 W
Left-on mode power absorption <sup>1)</sup>	0,13 W
Off mode power absorption <sup>1)</sup>	0,13 W

Power consumption in networked standby <sup>2)1)</sup>	2,0 W
Time to networked standby <sup>1)</sup>	15 min.
Type of use	Household
Permitted ambient temperature	+ 5°C to + 35°C
Level of protection against ingress of solid particles and moisture ensured by the protective cover, except where the low voltage equipment has no protection against moisture	<b>IPX4</b>
Gas designation	R290
Gas weight	0,149 kg

1) With reference to EN 61121.

2) The energy consumption of the connected function is approximately 17,5 kWh per year. To disconnect this function, please refer to the chapter "Wi-fi - Connectivity setup".

## 19. WARRANTY - AUSTRALIA AND NEW ZEALAND

FOR SALES IN AUSTRALIA AND NEW ZEALAND

APPLIANCE: ELECTROLUX DRYER

**This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.**

### 1. In this warranty:

- a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
- b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
- c) 'ASC' means Electrolux authorised service centres;
- d) 'Electrolux' is the brand controlled Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in

respect of Appliances purchased in New Zealand;

- e) 'Warranty Period' means the period specified in clause 3 of this warranty;
  - f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.
2. **Application:** This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any nonexcludable statutory guarantees in Australia and New Zealand.
  3. **Warranty Period:** Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance.
  4. **Repair or replace warranty:** During the Warranty Period, Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux may, in its absolute

discretion, choose whether the remedy offered for a valid warranty claim is repair or replacement. Electrolux or its ASC may use refurbished parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux.

**5. Travel and transportation costs:**

Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.

**6. Proof of purchase** is required before you can make a claim under this warranty.

**7. Exclusions:** You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

- a) light globes, batteries, filters or similar perishable parts;
- b) parts and Appliances not supplied by Electrolux;
- c) cosmetic damage which does not affect the operation of the Appliance;
- d) damage to the Appliance caused by:
  - 1. negligence or accident;
  - 2. misuse or abuse, including failure to properly maintain or service;
  - 3. improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
  - 4. normal wear and tear;
  - 5. power surges, electrical storm damage or incorrect power supply;
  - 6. incomplete or improper installation;
  - 7. incorrect, improper or inappropriate operation;
  - 8. insect or vermin infestation;
  - 9. failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- a. the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for

purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;

- b. the Appliance is modified without authority from Electrolux in writing;
- c. the Appliance's serial number or warranty seal has been removed or defaced

**8. How to claim under this warranty:** To enquire about claiming under this warranty, please follow these steps:

- a. carefully check the operating instructions, user manual and the terms of this warranty;
- b. have the model and serial number of the Appliance available;
- c. have the proof of purchase (e.g. an invoice) available;
- d. telephone the numbers shown below.

**9. Australia:** For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

**10. New Zealand:** For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

**11. Confidentiality:** You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

---

### Important Notice

---

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

---

### AUSTRALIA

---

#### FOR SERVICE

or to find the address of your nearest authorised service centre in Australia

**PLEASE CALL 13 13 49**

For the cost of a local call

#### FOR SPARE PARTS

or to find the address of your nearest spare parts centre in Australia

**PLEASE CALL 13 13 50**

For the cost of a local call

---

### NEW ZEALAND

---

#### FOR SERVICE

or to find the address of your nearest authorised service centre in New Zealand

**PLEASE CALL 0800 10 66 10**

#### FOR SPARE PARTS

or to find the address of your nearest state spare parts centre in New Zealand

**PLEASE CALL 0800 10 66 20**

---

EDryer\_Warr\_Jul19

## 20. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

**electrolux.com**

136214700-A-362024



**CE**